

Step 4.

Adjust the vertical and horizontal position of the gate until it sits straight and level with the gate opening. Then tighten all of the **Acorn Nuts** with a 7/16" wrench. Do not over tighten. (See Figure 4)

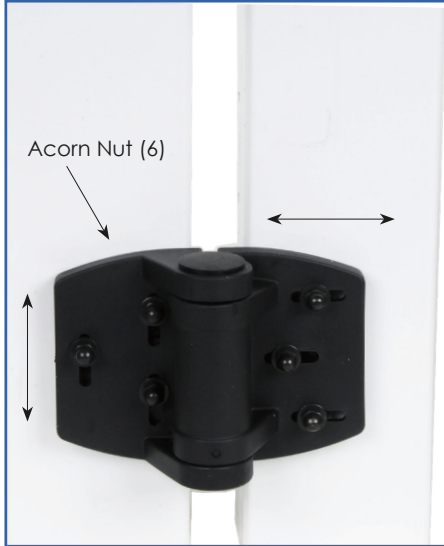


Figure 4.

To Increase The Spring Tension:

1. Remove End Cap by placing a screwdriver in the slot under the cap and lift it up. (Figure 5.)
2. Open the gate until the adjustment marks on the front of the hinge line up. (Figure 6.)
3. Push the button down and hold it down while closing the gate. The number indicator on the button will turn to the next higher number. (Figure 7.)
4. Release the button.
5. Repeat steps 2-4 to increase the spring tension and the gate return speed. The maximum adjustment is 5.
6. Reinstall the End Cap on the **Assembled Spring Body Hinge**.



Figure 5.



Figure 6.



Figure 7.

To Decrease The Spring Tension:

1. Open the gate until the adjustment marks on the front of the hinge line up.
2. Push and hold the button down, while opening the gate all the way. The number indicator on the button will turn to the next lower number.
3. Release the button and close the gate.
4. Repeat the steps 1-3 to decrease the spring tension and the gate return speed.

HEAVY DUTY SELF CLOSING MULTI ADJUSTABLE HINGE

